

Contents



1 Important safety instructions	44
2 Description	2.1 Purpose.....	46
	2.2 Operating elements.....	46
3 Before starting the washer	3.1 Setting up the washer.....	47
	3.2 Connecting the high pressure hose	47
	3.3 Connecting the water supply	47
	3.4 Electrical connection	48
4 Operation	4.1 Connecting the spray lance to the spray handle	48
	4.2 Switching on the washer	48
	4.2.1 Switching on the washer when it is connected to a water supply	48
	4.2.2 Switching on the washer when it is connected to open tanks (suction mode).....	48
5 After using the washer	5.1 Switching off the washer	49
	5.2 Disconnecting supply lines	49
	5.3 Storing the washer (below 0°C).....	49
6 Maintenance	6.1 Maintenance plan.....	50
	6.2 Maintenance work	50
	6.2.1 Cleaning water inlet filter	50
	6.2.2 Checking the pump oil level	50
	6.2.3 Changing the pump oil	50
7 Troubleshooting	51
8 Further information	8.1 Recycling the washer	51
	8.2 Guarantee	52
	8.3 Technical Specifications	52
	8.4 EU Declaration of Conformity.....	52
	8.5 Accessories.....	52

1 Important safety instructions

Symbols used to mark instructions



Before using the high-pressure washer, be sure to also read the enclosed operating instructions and keep them within reach at all times.



This symbol is used to mark safety instructions that must be observed to prevent damage to the machine and its performance.



Safety instructions in these operating instructions which must be observed to prevent risks to persons are marked with this danger symbol.



This indicates tips and instructions to simplify work and to ensure safe operation.



For your own safety

The high-pressure washer may only be used by persons instructed in its use and who have been expressly authorised to do so.

Although extremely easy to operate, children should not be allowed to use the washer.

General

Use of the high-pressure washer is subject to the applicable local regulations. Besides the operating instructions and the binding accident prevention regulations valid in the country of use, observe recognised regulations for safety and proper use. Do not use any unsafe work techniques.

Transport

Transport of the high-pressure washer in upright position only.

For safe transport in and on vehicles we recommend to prevent the equipment from sliding and tilting by fixing it with belts.

For transport at temperatures around or below 0°C, anti-freeze should be drawn into the pump beforehand (see chapter 5).

Before starting the washer

Before use, check that the high-pressure washer is safe and in proper condition. Regularly check whether the power cord is damaged or shows signs of ageing.

Use the high-pressure washer only when the mains power lead is in a safe condition. (risk of electric shock if damaged!).

Check the rated voltage of the high-pressure washer before connecting it to the mains power supply. Ensure that the voltage shown on the rating plate corresponds to the voltage of

the local mains power supply.

We strongly recommend that the power supply to the high pressure washer be connected via a residual current circuit breaker.

This device stops the supply of electricity if the leakage current to earth exceeds 30 mA for 30 ms or it has an earth tester circuit.

Operate the washer only in an upright position!

Please observe the regulations and provisions applicable in your country. Before putting the high-pressure washer into service, carry out a visual check of all the major components.

CAUTION!

High-pressure water jets can be dangerous if misused. The jet must not be directed at persons, animals, live electrical equipment or the washer itself. Wear appropriate protective clothing and eye protectors.

Do not direct the jet towards yourself or towards other persons in order to clean clothes or footwear.

During use, appropriate hearing protection has to be used.

During operation of the washer, recoil forces are produced at the spraying device and, when the spray lance is held at an angle, a torque is also created. The spraying device must therefore be held firmly in both hands.



Do not use the washer when other people without protective clothing are in the working area.

Check that cleaning will not result in dangerous substances (e.g. asbestos, oil) being washed off the object to be cleaned and harming the environment.

Do not clean delicate parts made of rubber, fabric, etc. with the 0° jet. Keep some distance between high pressure nozzle and surface in order to prevent the surface from damage.

Do not use the high-pressure hose for lifting loads.

NOTE!

The specifications of the high-pressure hose (max. permissible pressure and temperature) are printed on the hose.

Do not continue to use the washer if the mains power lead or high-pressure hose is damaged.

Ensure adequate air circulation. Do not cover the washer or operate it in inadequately ventilated rooms!



Store the washer where it will not be exposed to frost!

Never operate the washer without water. Even brief shortages of water result in severe damage to the pump seals.

Operation

CAUTION!

Unsuitable extension cords can represent a source of danger. Always unwind cord from the reels completely to prevent the power cord overheating.

When using an extension cord, connectors must be of water-tight construction.

When using an extension cord, check the minimum cross-sections of the cable:

Cable length m	Cross section	
	<16 A	<25 A
up to 20 m	ø1.5mm ²	ø2.5mm ²
20 to 50 m	ø2.5mm ²	ø4.0mm ²

Do not damage the mains power lead (e.g. by driving over it, pulling or crushing it). Disconnect the power cord by pulling the plug only (do not pull or tug the power cord).

Electrical equipment



CAUTION!

Never spray electrical equipment with water: danger for persons, risk of short-circuiting.

The washer may only be connected to a correctly installed plug socket.

Switching on the washer may cause voltage fluctuations. Voltage fluctuations should not occur if the impedance at the transfer point is less than 0.15Ω. If in doubt, ask your local electricity supplier.

Maintenance and repair

CAUTION!

Always remove the plug from the mains plug socket before cleaning or carrying out maintenance work on the washer.

Carry out only the maintenance operations described in the operating instructions. Use only original spare parts. Do not make any technical modifications to the high-pressure washer.

Ensure that the machine is regularly serviced by Authorised dealers in accordance with the maintenance plan. Failure to do so will invalidate the warranty.

CAUTION!

High-pressure hoses, fittings and couplings are important for the safety of the washer. Use only high-pressure parts approved by the manufacturer!

If the power cord is damaged, it must be replaced by authorized Service or an electrician to avoid danger before use of the washer is continued.

Use only the type of power cord specified in Operating Instructions.

Please contact the Service department or an authorised specialist work-shop for all other maintenance or repair work!

Safety Devices

Unloader valve

Unacceptably high pressure is fed back without residual pressure via a bypass line into the intake line of the pump when the safety device is tripped.

The unloader valve is set and sealed at the factory and must not be adjusted.

2 Description

2.1 Purpose

This high-pressure washer has been designed for professional use within

- Trade
- Construction industry
- Small-scale farming

Always use the washer as described in these operating instructions. Any other use may damage the washer or the surface to be cleaned or may result in severe injury to persons.

2.2 Operating elements


See fold-out page at front of these operating instructions.



- 1 Handle
- 2 Mains power lead
- 3 Spray handle
- 4 High-pressure hose
- 5 Spray lance
- 6 Supply water connection with water inlet filter
- 7 High pressure hose connection
- 8 Main switch


3 Before starting the washer

3.1 Setting up the washer

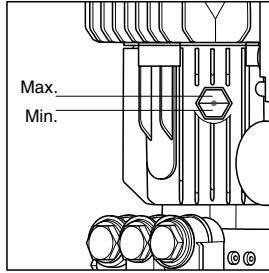


1. Before using the washer for the first time, check it carefully to detect any faults or damage.
2. In the event of any damage contact your dealer immediately.
3. Check whether the oil level is between the minimum and maximum marks. If necessary, add oil (see chapter 8.3 for type of oil). **NOTE:** Set the machine in upright position when checking the pump oil.

3.2 Connecting the high pressure hose

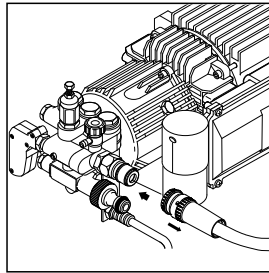

1. Screw the quick connector of the high pressure hose onto the nipple on the washer (7).

3.3 Connecting the water supply

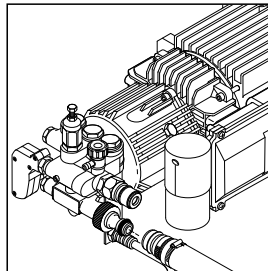

- briefly to a pipe interrupter with moving section
- with a free outlet

See chapter 8.3 Technical Data for required quantity of water and water pressure.
In the case of poor water quality (sand, etc.), we recommend that a fine water filter is fitted in the water inlet.




Do not connect the washer directly to the public drinking water mains. Observe the regulations of your water supply company to prevent backflow of water into the supply line. A connection is permitted, however:

1. Rinse the water supply hose briefly in order to prevent sand and other dirt particles entering into the machine.
2. Connect water supply hose to the machine (3/4").
3. Open water tap.

1. Observe safety instructions in chapter 1.
2. Put the plug into the electrical socket.

4 Operation

4.1 Connecting the spray lance to the spray handle

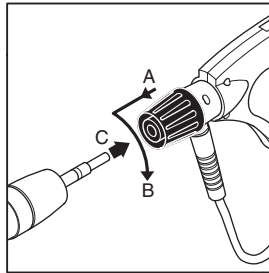

1. Pull the blue quick-release grip (A) of the spray handle forwards and lock it by turning it to the left.
2. Insert the nipple of the spray lance (C) into the quick-release connection and turn the blue quick-release grip to the right (B).
3. Pull the spray lance (or other accessory) forwards to check that it is securely attached to the spray handle.




NOTE!

Always remove any dirt from the nipple before connecting the spray lance to the spray handle.

4.2 Switching on the washer

4.2.1 Switching on the washer when it is connected to a water supply

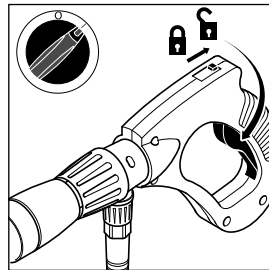

1. Main switch
Turn the switch to position »I«.
2. Unlock the spray handle and activate it.
3. Lock the spray handle even during short pauses.

The washer switches off automatically after the spray handle has been closed. To start the washer again, activate the spray handle.



NOTE!

Operate the spray handle several times at short intervals to vent the system.

4.2.2 Switching on the washer when it is connected to open tanks (suction mode)


1. Before connecting the detergent intake set to the washer, fill the hose with water.
2. Turn main switch to position »I«.

3. Unlock the spray handle and activate it.

Max. suction height = 0 m.

5 After using the washer

5.1 Switching off the washer

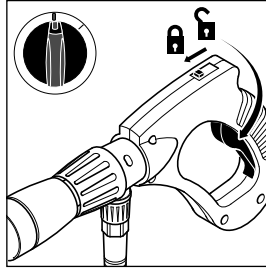

1. Turn the main switch to position »0«.
2. Close water tap.
3. Activate the spray handle until the washer is depressurised.
4. Lock the safety catch on the spray handle.

5.2 Disconnecting supply lines

1. Remove the water hose from the washer.
2. Pull out the plug from the electrical socket.

5.3 Storing the washer (below 0°C)



1. Store the washer in a dry room without danger of frost or protect as below:

CAUTION!

If the high-pressure washer is stored in a room with temperatures around or below 0°C, anti-freeze should be drawn into the pump beforehand:

1. Remove the water inlet hose from the washer.
2. Remove the spray lance.
3. Connect the suction hose to the water inlet of the washer and place it in a tank containing anti-freeze.
4. Switch on the washer with the main switch in position »I«.

5. Hold the spray handle over the tank containing anti-freeze and operate it to start suction.
6. During suction operate the spray handle two or three times.
7. Lift the suction hose from the tank containing anti-freeze and operate the spray handle to pump off the remaining antifreeze.
8. Switching off the washer
9. Disconnect the plug from the socket.
10. To avoid any risks, store the washer temporarily in a heated room before using it again.


6 Maintenance

6.1 Maintenance plan

	Weekly	After the first 50 operating hours	Every six months or 100 operating hours	As required
6.2.1 Cleaning water inlet filter	●			●
6.2.2 Checking pump oil level	●			
6.2.3 Changing pump oil		●	●	

6.2 Maintenance work


6.2.1 Cleaning water inlet filter

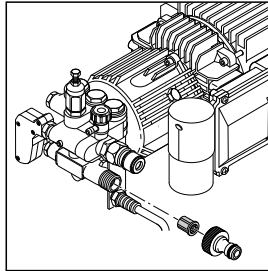

A water filter is fitted on the water inlet to prevent large particles of dirt from entering into the pump.


1. Unscrew the quick-release connection.
2. Remove the filter and rinse it. Replace damaged filter. Replace damaged filter.

6.2.2 Checking the pump oil level

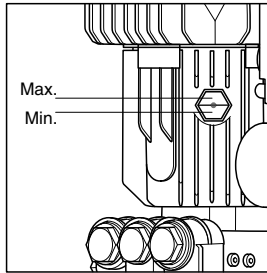

1. Check whether the oil level is between the minimum and maximum marks. If necessary, add oil (see chapter 8.3 for type of oil).

6.2.3 Changing the pump oil

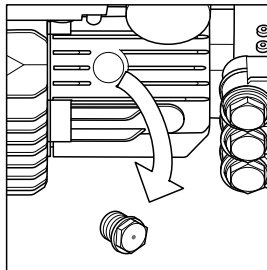

1. Unscrew the oil drain plug (1) on the pump housing and dispose of the old oil in accordance with the disposal regulations.
2. Fill with fresh oil and re-mount the oil drain plug. Check the oil level.


Oil type and volume, see chapter **8.3 Technical Data**.

7 Troubleshooting

Fault	Cause	Remedy
Pressure drop	<ul style="list-style-type: none"> > Air in the system > High pressure nozzle blocked worn 	<ul style="list-style-type: none"> • Vent the system by operating the spray handle several times at short intervals. If necessary, operate the washer for a short time without the high-pressure hose connected. • Clean/replace the high pressure nozzle
Pressure fluctuations	<ul style="list-style-type: none"> > Pump draws in air (only possible in suction mode) > Lack of water > Water inlet hose is too long or its cross-section too small > Lack of water caused by blocked water filter > Lack of water because max. permissible suction height has not been heeded 	<ul style="list-style-type: none"> • Check that the suction set is air-tight • Open water tap • Use specified water inlet hose • Clean the water filter in the water connection (never work without water filter) • See instructions
The motor does not start when the washer is switched on	<ul style="list-style-type: none"> > The plug is not inserted properly, i.e. there is no current > The mains fuse is switched off 	<ul style="list-style-type: none"> • Check the plug, lead and switch and if necessary have them replaced by a trained electrician • Switch on the mains fuse
When the washer is switched on the motor buzzes without starting	<ul style="list-style-type: none"> > The mains voltage is too low > The pump is blocked or frozen > Incorrect cross-section or length of the extension lead 	<ul style="list-style-type: none"> • Have the electrical connection checked • Contact the customer service • Use lead with correct cross section or length
The motor switches off	<ul style="list-style-type: none"> > The overload protection has been activated due to overheating or overloading of the motor > High-pressure nozzle is dirty 	<ul style="list-style-type: none"> • Check that the mains voltage and the washer voltage are the same. Switch off the washer and allow it to cool for at least 3 minutes • Change the high-pressure nozzle
Water outflow under the machine	<ul style="list-style-type: none"> > Machine runs longer than 3 minutes with spray handle closed 	<ul style="list-style-type: none"> • Switch off the machine

8 Further information

8.1 Recycling the washer

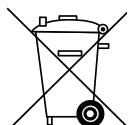

Make the old cleaner unusable immediately.

1. Unplug the washer and cut the electric cable.

Do not discard electrical appliances with household waste.

As specified in European Directive 2002/96/EC on old electrical and electronic appliances, used electrical goods must be collected separately and recycled ecologically.

Contact your local authorities or your nearest dealer for further information.



8.2 Guarantee



Our general conditions of business are applicable with regard to the guarantee. Subject to

change as a result of technical advances.


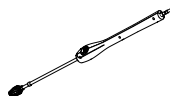

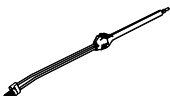
8.3 Technical Specifications

		POSEIDON 2-24 PORTABLE		POSEIDON 2-26 PORTABLE	
Voltage	230 V / 1~/50Hz	DK	EU	DK	EU
Fuse	A	10	10	13	13
Power rating	kW	2.2	2.2	3.0	3.0
Working pressure	bar (MPa)	100 (10)	100 (10)	140 (14)	140 (14)
Volume flow (max.)	l/h	650	650	610	610
Volume flow Q_{EC}	l/h	600	600	540	540
Max. water inlet temperature	°C	50			
Max. water inlet pressure	bar (MPa)	10 (1)			
Dimensions l x w x h	mm	555 x 290 x 275			
Weight	kg	24	24	26	26
Noise pressure level at a distance of 1 m EN 60704-1	dB(A)	86.8	86.8	86.8	86.8
Noise power level	dB(A)	99.3	99.3	99.3	99.3
Torque	N	17	17	20	20
Oil quantity in pump	ml	150			
Oil type		HV68			
Hand/arm vibration level	m/s ²	< 2.5			

8.4 EU Declaration of Conformity

		EU Declaration of Conformity	
Product:	High Pressure Washer		
Type:	Poseidon 2-24 Portable, Poseidon 2-26 Portable		
Description:	400 V 3~, 50 Hz - 230 V 1~, 50 Hz - IP X5		
The design of the unit corresponds to the following pertinent regulations:	EC Machine Directive 98/37/EEG EC Low-voltage Directive 73/23/EEG EC EMV Directive 89/336/EEG		
Applied harmonised standards:	EN 292-1, EN 292-2, EN 60335-2-79 EN 55014-1, EN 55014-2, EN 61000-3-2		
Applied national standards and technical specifications:	DS EN 60335-2-79		
	Niifisk-ALTO Division of Niifisk-Advance A/S Industrivej 1 DK-9560 Hadsund		
Anton Sorensen V.P. Technical Operations Europe	Hadsund, 01.06.2004		

8.5 Accessories

Poseidon Portable						
	High pressure hose 3/8"			Turbo-hammer	Cross grip	Powerspeed Vario
	15 m	20 m	50 m			
2-24	1402064	1402072	1402759	106402178	106402110	106402182
2-26	1402064	1402072	1402759	106402177	106402110	-